



2022+ Honda Grom Factory Turn Signal Quick Install Guide

Requires extension harness kit SKU: WH-EXT6-H01 for installation


1. Grab the factory fender and disassemble it (4 screws and 1 bolt from underneath), then pop off the lower cover.

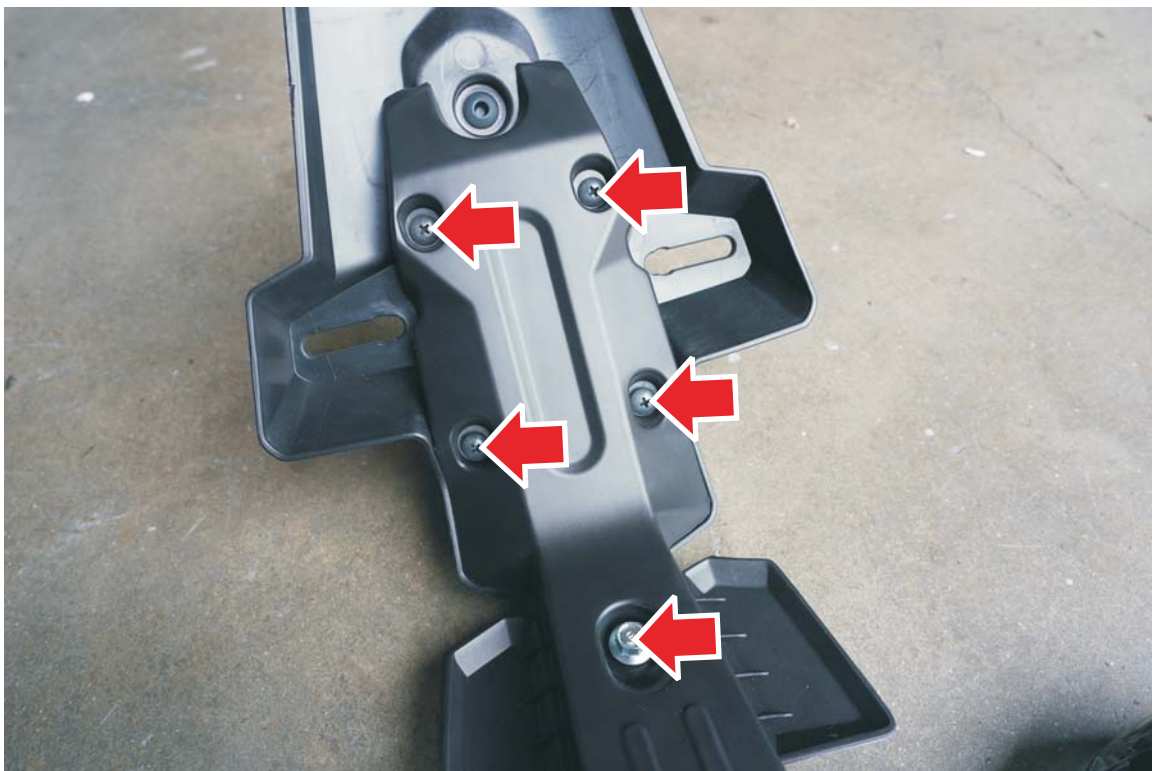

2. Carefully pull out the socket/bulb for the license plate light and un-route from the wire management clip. Remove the bulb from the socket and secure the socket with electrical tape so that it does not short.

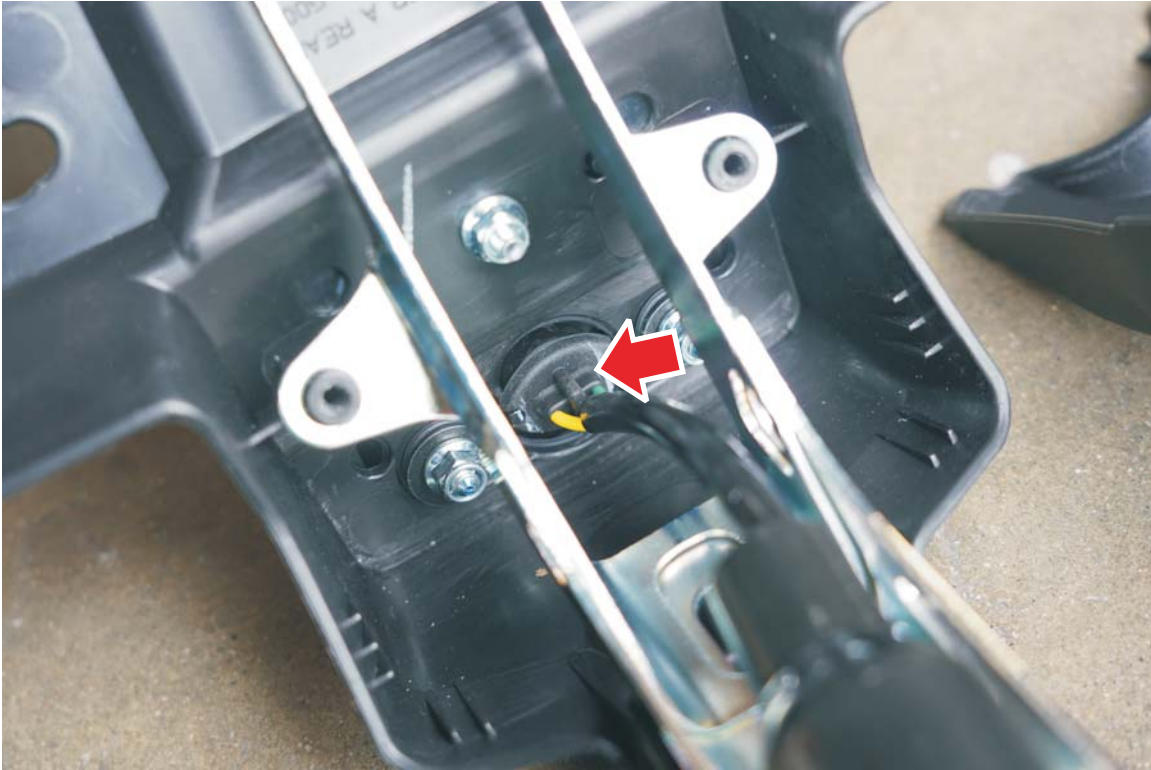

3. Unplug the left/right signal bullet connectors and unbolt signals (1 large nut for each signal), there is metal spacer that will come out which will no longer be used. Continue to completely remove the harness assembly and plug it back into the bike.

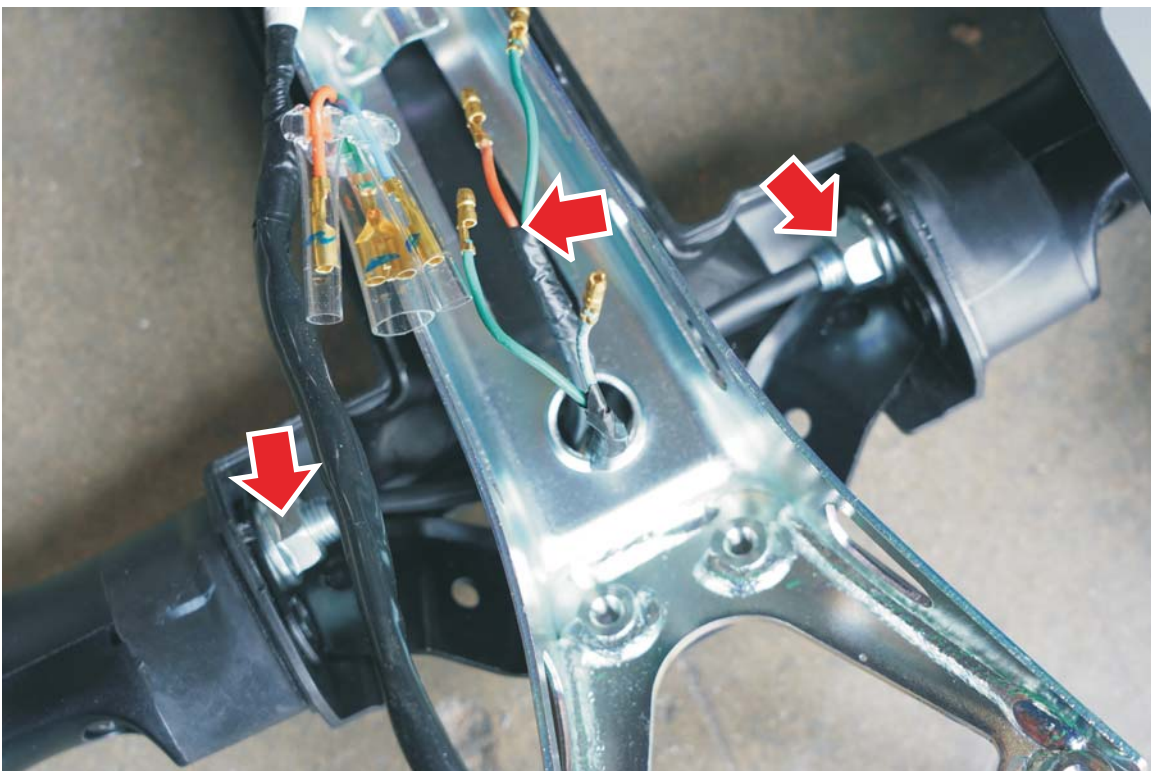

Step 3 continued.



4. Mount the turn signals to the factory signal adapters included in this kit using the same nut from step 3 above.



5. Attach the turn signal harness extension kit to the left/right signal output. The extension kit will aid in wire management due to the obstruction of the cross plate on the Grom's sub frame.



6. Mount the signal assembly behind the plate holder to the same holes for the license plate using four M6x16mm bolts, M6 large OD washers and M6 lock nuts. Bolt>License Plate>Plate Holder>Signal Bracket>Washer>Nut. Feed the signal wires through the opening on the plate holder and plug back into the harness from step 3.

